

LASER TONER CARTRIDGE INSTRUCTION

Toner Counter Reset for Brother TN760/2420 Series








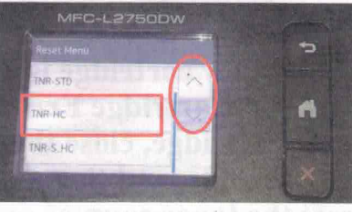
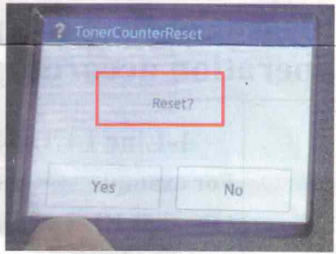




Thank you for purchasing our toner cartridge!

After a new cartridge is installed, if the printer displays "Cartridge Error", please reinstall the toner cartridge, close the front cover, wait for 8-10 seconds, and then open the front cover to reset the toner counter as the below steps.



* Please confirm the printer model first and perform the corresponding operation according to the following table.

	1-Line LCD Models For example (Brother HL-L2350DW/ HL-L2370DW/HL-L2370DW XL/HL-L2375DW)	2-Line LCD Models For example (Brother DCP-L2550DW/ HL-L2390DW/MFC-L2710D W/Brother DCP-L2510D/ DCP-L2530DW)	Touchscreen Models For example (Brother HL-L2395DW/ MFC-L2750DW/MFC-L2750 DW XL/MFC-L2730DW)
Step 1	Press the "Back" and "Go" buttons 1 to 2 seconds at the same time. After releasing the hand, press the "Back" button again at once, and the printer screen display "TNR-STR".	Press the "Clear" and "Stop/Exit" buttons 1 to 2 seconds at the same time. After releasing the hand, press the "Clear" button again at once, and the printer screen display "Reset Menu K.TNR-STR".	Press the "Back" and "X" buttons 1 to 2 seconds at the same time. After releasing the hand, press the "Back" button again at once. And the "Reset Menu" appears.

<p>Step 2</p>	<p>Press “  </p>	<p>The “Reset Menu” appears. Press  to select “K.TNR-HC” and then press “  </p>	<p>Select “TNR-HC” by clicking the screen  / , and then click the “TNR-HC”, the printer display the TonerCounterResrt interface.</p>  
<p>Step 3</p>	<p>Press “  </p>	<p>Press “  </p>	<p>Click “Yes”, and please close the front cover after the screen display “Accepted”.</p> 